

17 COAX ANTENNA SHEILD

16 COAX ANTENNA CORE

REMOTE RADIO

LEARN BUTTON

24 VAC OUT

FOR ACCESSORIES

7 / 8 = 24 VAC FOR ACC.

9 =COMMON

9/10= START

11/9 NC PHOTOCCELL SAFETY


12/10 NC STOP BUTTON

13/14 NC OPEN LIMIT SWITCH

13/15 NC CLOSE LIMIT SWITCH

PROGRAM JUMPER TO PROGRAM CYCLE TIME: after all connections are made and before the door curtain is attached to the motor insert jumper over both jumper prongs and , power up unit . Give a momentary start command after approx. 22 seconds give a second momentary start command. Remove jumper and save for future programming if necessary . If programmed properly you should hear a series of "clicks " each click representing 1 second of run time . Now cycle the door to the closed position , disconnect power and connect the curtain to barrel following the manufacturers instructions for the operator installation .

Direction (open or close)

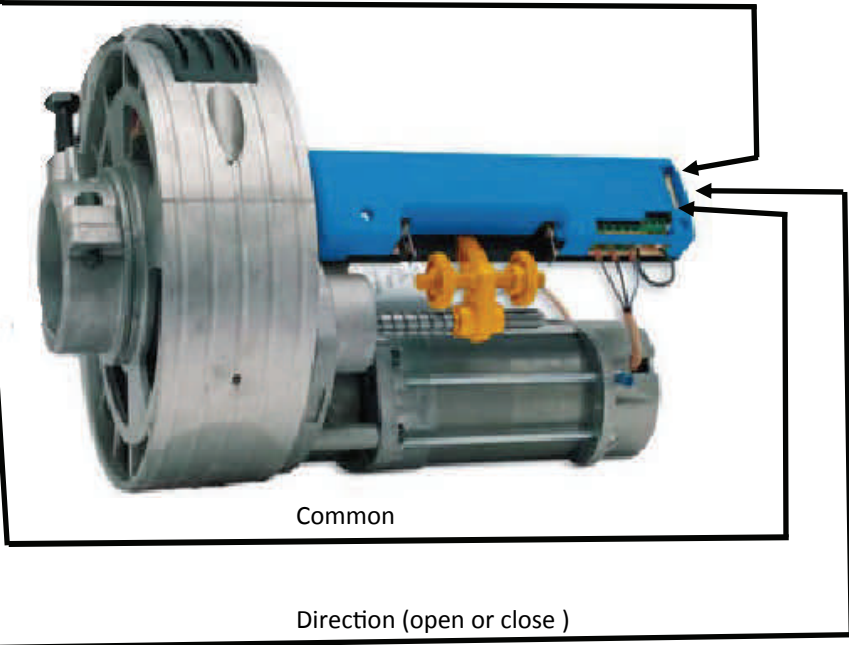

Common

Direction (open or close)

110 volt ac

